



Sony DSC-HX50V Lens Replacement

Disassemble the camera it to get to the lens.

Written By: nijs77



INTRODUCTION

Disassemble the camera to get to the lens.

Step 1 — Lens




- Remove the battery. Unscrew the three screws that are circled. Repeat for circled screws on either side. These screws are all the same size.

Step 2



- Pull the frame around the LCD up from the bottom of the camera and remove it.


Step 3

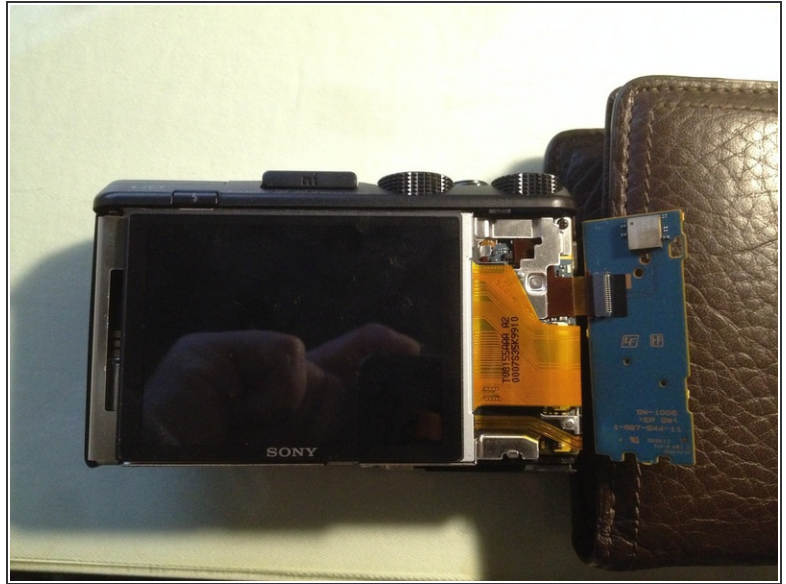

- Gently push up the board from left corner.
- Gently push up the board only, not the whole metal assembly.


⚠ Be gentle.

Step 4

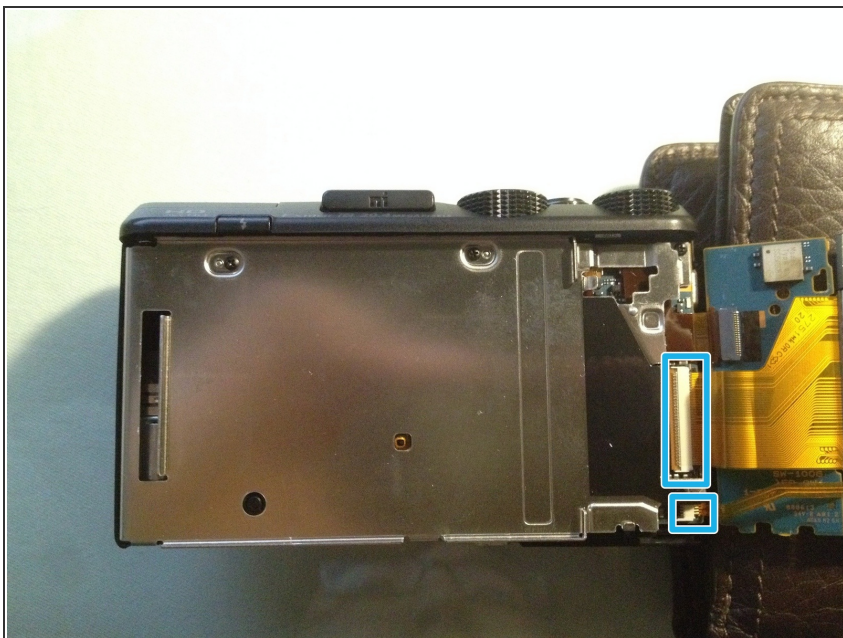



- With needle nose pliers, gently bend back the metal tab at the bottom of the click wheel PCB so that you can release this board from the upper metal tab. Fold it away to the right and slide apart the ribbon cable from this board and place aside.
- Then lift the LCD display away from the camera and again carefully remove two ribbon cables (boxed in blue) and place aside.

Step 5

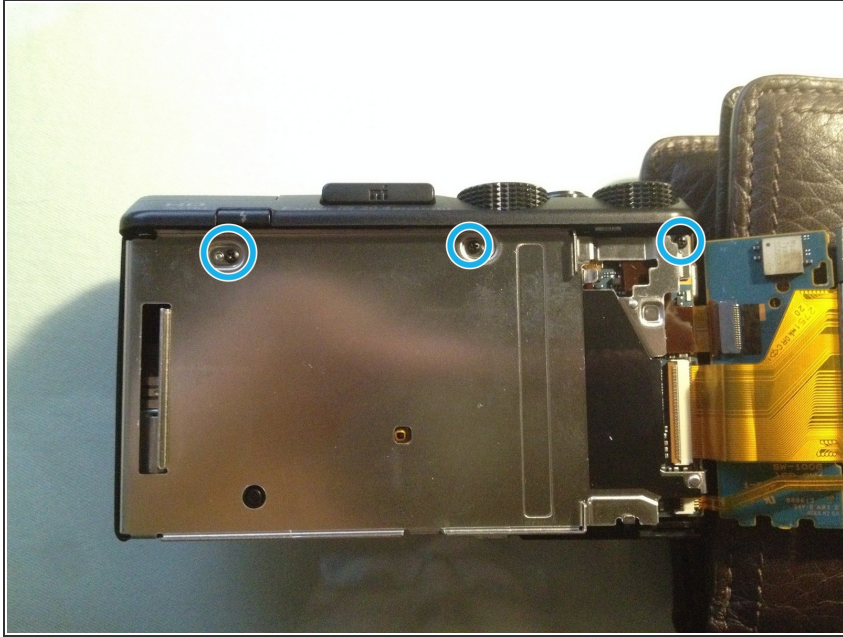


- Remove the three screws circled in blue. Gently use a spudger to lever the metal assembly away from the camera body and place it aside.

Step 6

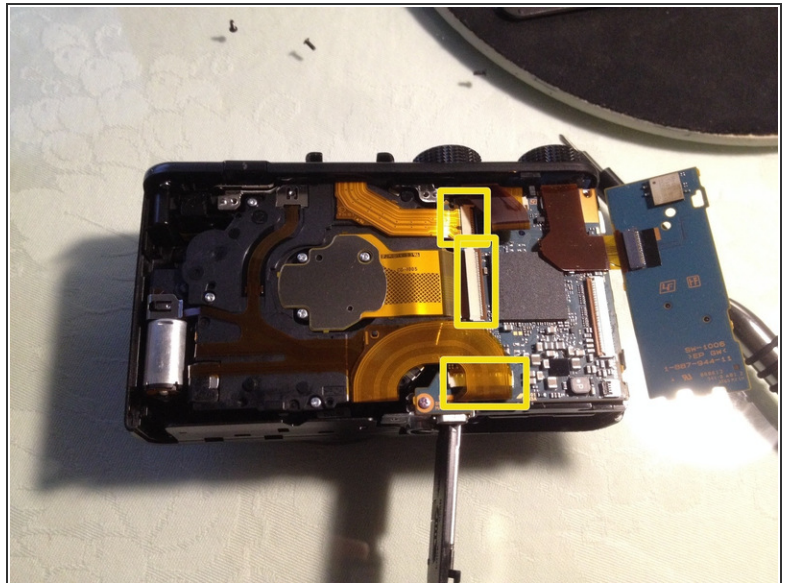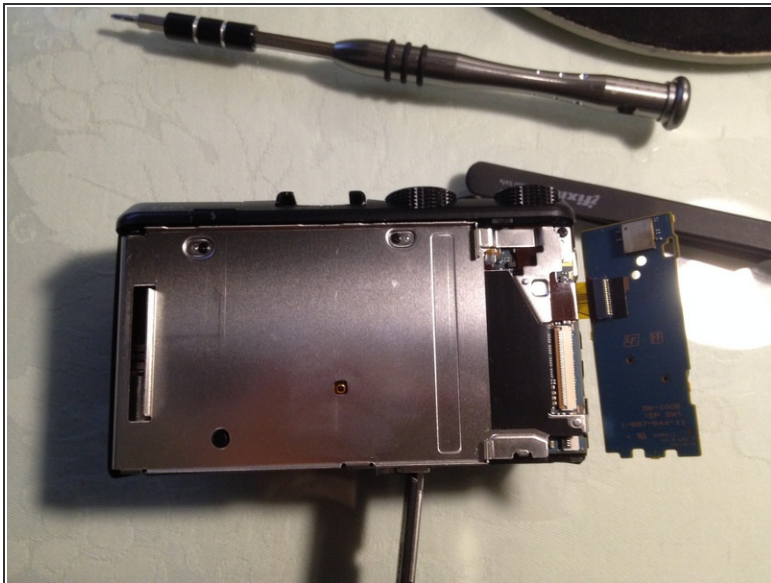


- Insert wisdom here.

Step 7

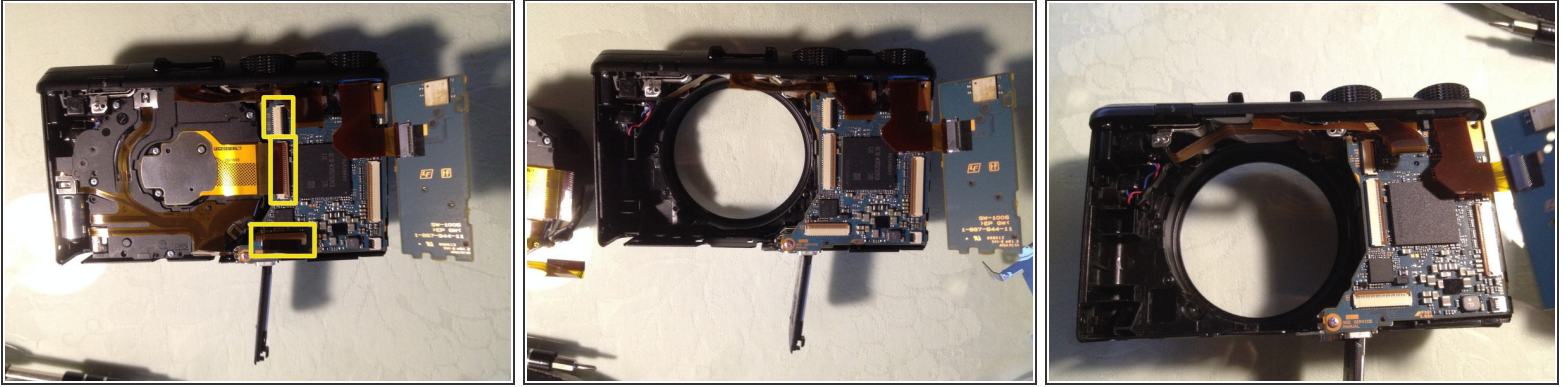


- Gently release the three flexible pcbs that are boxed in yellow. Now you can gently push the lens assembly from the front to clear it from the body.

Step 8

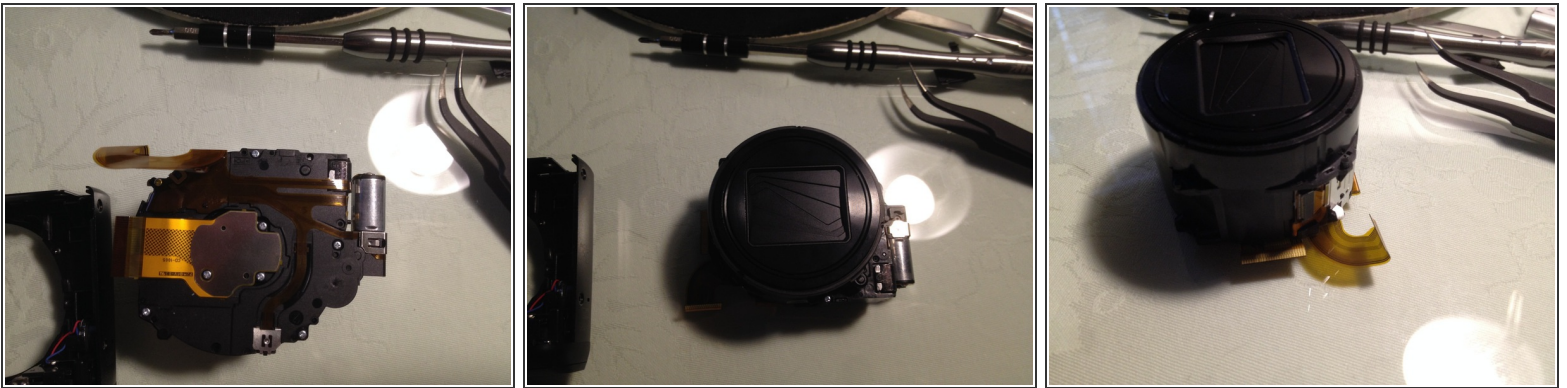

- The lens assembly is now removed from the body.

Step 9

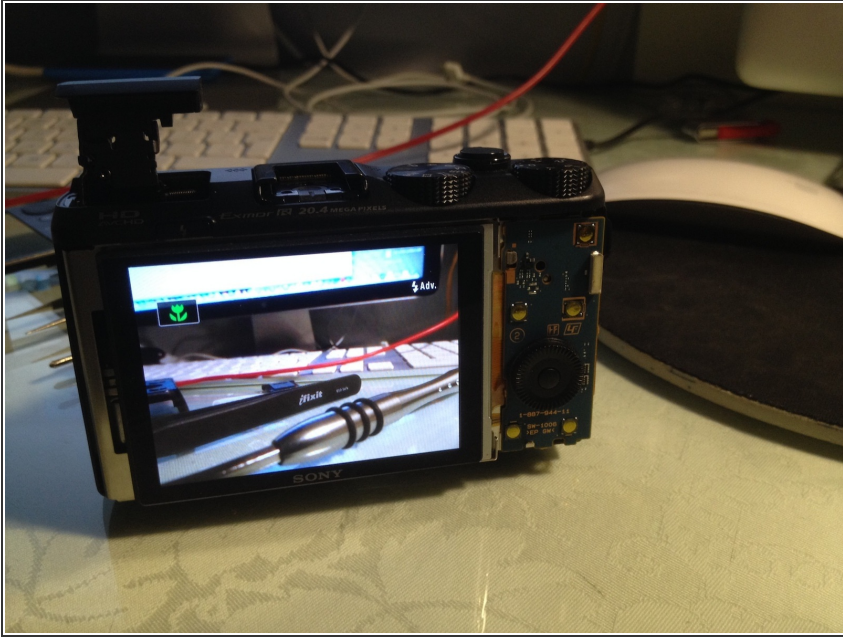

- Insert wisdom here.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 08:44:34 PM.